

## OSSI-010-036 Sonic Wave Sensor RV Quick Start Guide

This guide will assist the user to obtain data from the Sonic Wave Sensor RV in the quickest time possible. The user is advised to read the user manual and Specification sheet in its entirety before actual deployment.

- 1. After unpacking the unit, check to see there is a USB Adapter, Sonic Wave Sensor RV and a Connector cable.
- 2. Install the USB adapter on your computer, with an internet connection. See the adapter web site for quick start guide: <a href="http://www.easysync-ltd.com/">http://www.easysync-ltd.com/</a>
- 3. Download and Install the Sonic & Staff Products Interface Software at www.oceansensorsystems.com.
- 4. Run the Sonic & Staff Products Interface Software and select Wave Staff XB & Sonic Wave Sensor XB/RV and the comport (USB to Serial Port).
- 5. Connect the power/signal cable to the USB to Serial adapter. See the user manual for detailed wiring information.
- 6. On the Sonic & Staff Products Interface Software set the Broadcast Power switch to the on position.
- 7. The unit will now connect and start sending sampled data to the Interface Software program.